



ACP-12CH35REWI R32
ACP-18CH50REWI R32

SR BIH

Korisničko uputstvo **Klima uređaj**



SADRŽAJ

Rad i održavanje

Upozorenje	3
Mere sigurnosti	4
Napomene za upotrebu	10
Nazivi svih delova	12
Čišćenje i održavanje	13
Rešavanje problema	15

Upozorenje

Upozorenje: Ovaj klima uređaj koristi R32 zapaljivo rashladno sredstvo.

Napomene: Klima uređaj s R32 rashladnim sredstvom može uzrokovati ozbiljnu štetu ljudskom telu ili okolnim stvarima ukoliko se grubo tretira.

- * Prostor u sobi za instalaciju, upotrebu, popravku i skladištenje ovog klima uređaja trebao bi biti veći od 5m².

Napomena: sve slike u ovom uputstvu samo su šematski dijagrami. Prava slika je standard.

- * Rashladno sredstvo klima uređaja ne sme težiti više od 1.7kg.
- * Nemojte koristiti bilo kakve metode ubrzavanja odmrzavanja ili čišćenja mrzlih delova, izuzev onih posebno preporučenih od strane proizvođača.
- * Nemojte probiti ili paliti klima uređaj i proverite jesu li cevi rashladnog sredstva oštećene.
- * Klima uređaj trebao bi da bude smešten u sobu bez trajnog izvora vatre, naprimjer otvorenog plamena, uključenog plinskog aparata, električne grejalice itd.
- * Napominjemo da rashladno sredstvo može biti bezukusno.
- * Skladištenje klima uređaja trebalo bi da spreči mehaničko oštećenje uzrokovano nesrećom.
- * Održavanje ili popravka klima uređaja koji koriste R32 rashladno sredstvo mora se obaviti nakon sigurnosne provere kako bi se umanjio rizik od nesreća.
- * Klima uređaj mora da se instalira s zaštitom zaustavnog ventila.

* Molimo da pažljivo pročitate uputstvo pre instalacije, upotrebe i održavanja.

Simbol	Napomena	Objašnjenje
	UPOZORENJE	Ovaj simbol pokazuje da ovaj aparat koristi zapaljivo rashladno sredstvo. Ako rashladno sredstvo prokri i bude izloženo spoljašnjem izvoru paljenja, postoji rizik od požara.
	OPREZ	Ovaj simbol pokazuje da je potrebno pažljivo pročitati uputstvo.
	OPREZ	Ovaj simbol pokazuje da bi servisno osoblje trebalo koristiti ovu opremu zajedno s instalacijskim priručnikom.
	OPREZ	Ovaj simbol pokazuje da su dostupni podaci kao što je radni priručnik ili instalacijski priručnik.

Mere sigurnosti

Neispravna instalacija ili korišćenje bez praćenja ovih uputstava mogu uzrokovati štetu ljudima, imovini itd.

Ozbiljnost je klasifikovana sledećim oznakama:

UPOZORENJE

Ovaj simbol označava mogućnost smrti ili ozbiljne povrede.

UPOZORENJE

Ovaj simbol označava mogućnost povrede ili štete imovini.

UPOZORENJE

Ovaj kućni aparat mogu koristiti deca u dobi od 8 godina i starija i osobe sa smanjenim fizičkim, senzitivnim ili mentalnim sposobnostima ili manjkom iskustva i znanja ako su pod nadzorom ili su upućena u vezi upotrebe aparata na siguran način i razumeju uključene opasnosti. Deca ne smeju da se igraju sa aparatom. Čišćenje i korisničko održavanje ne smeju obavljati deca bez nadzora. (Samo za uređaje s oznakom CE)

Ovaj aparat nije namenjen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, senzitivnim ili mentalnim sposobnostima ili manjkom iskustva i znanja osim ako su pod nadzorom ili su upućena u vezi upotrebe aparata od strane osobe odgovorne za njihovu sigurnost. Deca bi trebala biti pod nadzorom kako biste se uverili da se ne igraju sa aparatom.

(Izuzev za uređaje s CE oznakom)

Mere sigurnosti



Klima uređaj mora biti uzemljen. Nepotpuno uzemljenje može rezultovati elektrošokovima.
Nemojte povezivati žicu uzemljenja s gasovodom, vodovodom, gromobranom ili telefonskom žicom.



Uvek isključite uređaj i ugasite dotok energije kada ga ne koristite duže vreme kako biste bili sigurni.




Pazite da ne pokvasite unutrašnju jedinicu.
U suprotnom, moguće je da se dođe do kratkog spoja.



Ako je napojni kabl oštećen, mora da ga zameni proizvođač ili serviser ili slično kvalifikovana osoba.



Nemojte gasiti glavni strujni prekidač tokom rada ili mokrim rukama, budući da to može da uzrokuje elektrošok.

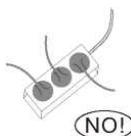

Nemojte deliti utičnicu s drugim električnim aparatom, budući da to može da uzrokuje elektrošok.




Uvek isključite uređaj i ugasite dotok električne energije pre izvršavanja bilo kakvog održavanja ili čišćenja. U suprotnom, može doći do elektrošoka ili oštećenja.




**Nemojte povlačiti strujni kabl. Šteta od povlačenja uzroковаće ozbiljan elektrošok.
Upozorenje da cevi povezane s aparatom neće sadržavati izvor paljenja.**


Mere sigurnosti

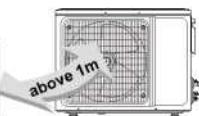


Nemojte instalirati klima uređaj na mesto gde postoji zapaljivi gas ili tečnost. Udaljenost između njih mora biti više od 1m. Ovim možete uzrokovati požar ili čak i eksploziju.

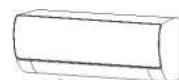


Nemojte koristiti tečno ili korozivno sredstvo za čišćenje kako bi brisali uređaj i prskati vodu ili druge tečnosti po njemu. Ovim možete uzrokovati elektrošok ili oštetiti aparat.

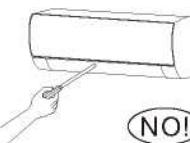


Nemojte pokušavati da popravite klima uređaj samostalno. Neispravne popravke mogu da uzrokuju požar ili eksploziju. Kontaktirajte kvalifikovanog servisnog tehničara za sve potrebe servisiranja.

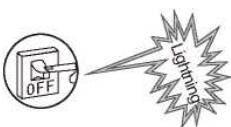

Nemojte koristiti klima uređaj tokom oluja. Potrebno je ugasiti izvor napajanja na vreme kako bi se sprečile moguće opasnosti.

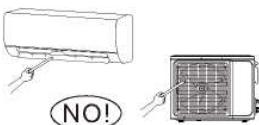

Nemojte stavljati ruke ili bilo koji drugi predmet u ulaze i izlaze vazduha. Ovo može uzrokovati povrede ili štetu na aparatu.

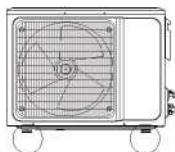

Molimo da pregledate da li je instalirani nosač dovoljno čvrst. Ako je oštećen, to može dovesti do pada jedinice i uzrokovati povredu.



Nemojte blokirati ulaz ili izlaz vazduha.
U suprotnom, kapacitet hlađenja ili grejanja biće slabiji i čak može uzrokovati prekid rada sistema.



Nemojte da dozvolite da klima uređaj duva na grejalicu. To može dovesti do nepotpunog zapaljenja i uzrokovati otrovanje.

Aparat će biti instaliran u skladu s nacionalnim propisima.

Osigurač uzemljenja s propisanim kapacitetom mora biti instaliran kako bi se izbegli mogući elektrošokovi.

Mere sigurnosti

Ovaj proizvod sadrži fluorisane gasove staklenika. Curenje rashladnog sredstva doprinosi klimatskim promenama. Rashladno sredstvo s nižim potencijalom globalnog zagrevanja (GWP) manje bi doprinelo globalnom zagrevanju od onog s višim potencijalom ako prokri u atmosferu. Ovaj aparat sadrži rashladno sredstvo s GWP-om jednakim [675]. Ovo znači da ako 1kg ove tečnosti prokri u atmosferu, uticaj na globalno zagrevanje bio bi [675] puta veći od toga da 1kg CO₂ prokri, tokom perioda od 100 godina. Nikada nemojte pokušati sami da prekidate krug rashladnog sredstva ili samostalno rastavljati proizvod. Uvek se savetujte s profesionalcem.

Pobrinite se da ispod unutrašnje jedinice nema sledećih predmeta:

1. Mikrotalasnih pećnica, šporeta i drugih vrućih predmeta.
2. Računara i drugih visoko elektrostatičkih predmeta.
3. Utičnica koje se često koriste.


Zglobovi između unutrašnje i spoljašnje jedinice neće biti ponovno korišćeni, osim ako se radi o popravci cevi.

Specifikacija osigurača odštampana je na ploči, npr.: 3.15A/250V AC, itd.

Mere sigurnosti




Nemojte otvarati prozore i vrata na duže vreme kada radi uređaj za klimatizaciju. U suprotnom je moguće slabljenje kapaciteta hlađenja i grejanja.

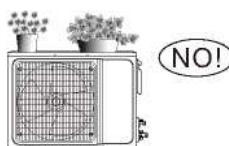


Nemojte stajati na vrhu spoljašnje jedinice ili stavljati teške stvari na njih. Ovo može uzrokovati povrede ili oštetiti aparat.



Nemojte koristiti klima uređaj u druge svrhe, poput sušenja odeće, čuvanja hrane itd.

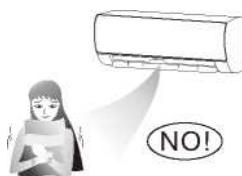

Nemojte primenjivati hladan vazduh na telo dugo vremena. On će uticati na Vaše zdravstveno stanje i uzrokovati zdravstvene probleme

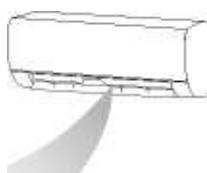

Postavite podobnu temperaturu.

Preporučuje se da temperaturna razlika između unutrašnje i spoljašnje temperature ne bude previše velika.

Primerena prilagođavanja postavki temperature mogu spričiti nepotrebno trošenje električne energije.

Ako Vaš uređaj nije opremljen strujnim kablom i utikačem, u fiksni sistem žica mora se instalirati prekidač sa svim polovima protiv eksplozije i udaljenost između kontakata ne sme biti manja od 3.0 mm.

Ako je Vaš uređaj trajno povezan, protiv-eksplozivni uređaj za preostalu struju (RCD) koji sadrži ne više od 30 mA struje trebalo bi da bude instaliran u sistem.

Strujni krug trebalo bi da ima zaštitu i vazdušni prekidač čiji kapacitet ne sme biti više od 1.5 puta od maksimalne struje.

U vezi instalacije klima uređaja, molimo da se konsultujete s dole navedenim u ovom priručniku.

Napomene za upotrebu

Uslovi aparata onemogućavaju normalan rad

Unutar temperaturnog raspona datog u sledećoj tabeli, klima uređaj može da prestane sa radom i mogu se pojaviti druge anomalije.

Hlađenje	Spoljašnje	>43 °C (Primenjivo na T1)
		>52 °C (Primenjivo na T3)
	Unutrašnje	<18 °C
Grejanje	Spoljašnje	>24 °C
		<-7 °C
	Unutrašnje	>27 °C

- * Kada je temperatura previsoka, klima uređaj može aktivirati uređaj za automatsku zaštitu tako da se uređaj može ugasiti.
- * Kada je temperatura preniska, izmenjivač toplice uređaja može da se zamrzne i to može dovesti do kapljanja vode ili drugog kvara.
- * Tokom dugoročnog hlađenja ili izvlačenja vlage s relativnom vlažnosti višom od 80% (vrata i prozori otvoreni), može doći do kondenzacije vode ili kapljanja blizu izlaza za vazduh.
- * T1 i T3 odnose se na ISO 5151.

Napomene za grejanje

- * Ventilator unutrašnje jedinice neće se pokrenuti odmah nakon pokretanja grejanja kako bi se izbeglo izdvavanje hladnog vazduha.
- * Kada je napolju hladno i vlažno, spoljašnja jedinica razviće mraz na izmenjivaču toplice, a to će povećati kapacitet grejanja. Nakon toga će klima uređaj početi s funkcijom odmrzavanja.
- * Tokom odmrzavanja, klima uređaj zaustaviće grejanje tokom 5-12 minuta.
- * Para može početi izlaziti iz spoljašnje jedinice tokom odmrzavanja. Ovo nije kvar nego rezultat poslednjeg odmrzavanja.
- * Grejanje će se nastaviti nakon završetka odmrzavanja.


Napomene za gašenje

Kada se klima uređaj gasi, glavni upravljač automatski će odlučiti treba li se zaustaviti odmah ili nakon 12-ak sekundi s nižom frekvencijom i brzinom vazduha.

Napomene za upotrebu


Rad u hitnom slučaju

- * Ako se daljinski upravljač izgubi ili polomi, koristite prekidač za prisilno paljenje kako bi koristili klima uređaj.
- * Ako je ovaj taster pritisnut dok je aparat ugašen, on će raditi u automatskom načinu.
- * Ako se ovaj taster pritisne dok je aparat uključen, on će se zaustaviti.

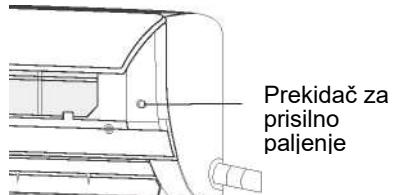

Prilagođavanje smera protoka vazduha


1. Koristite krilca za gore-dole i levo-desno na daljinskom upravljaču kako bi prilagodili smer toka vazduha. Pogledajte uputstvo kako bi doznali detalje o daljinskom upravljaču.
2. Za modele bez funkcije krilca, potrebno je ručno pokrenuti pregrade.

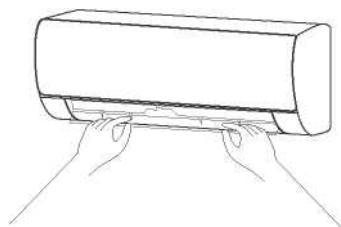

Napomena: Pomerite pregrade pre nego uključite aparat jer je moguća povreda prstiju.
Nikada nemojte ruku stavljati u ulaz ili izlaz vazduha dok aparat radi.


Specifični oprez

1. Otvorite prednju ploču unutrašnje jedinice.
2. Konektor (na slici) ne sme dodirivati ploču terminala i nalazi se kao na slici.

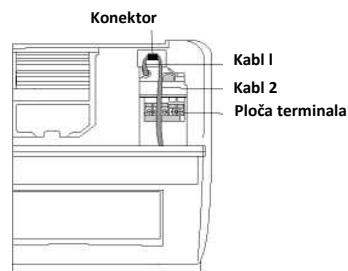


Nazivi svih delova

Unutrašnja jedinica

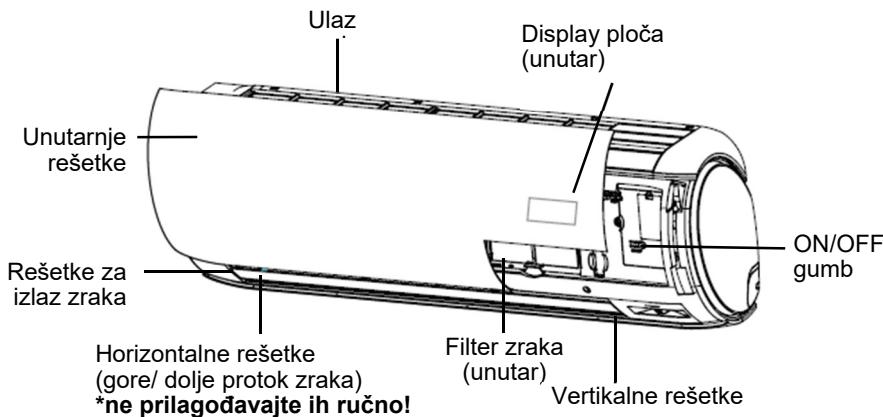

Vanjska jedinica

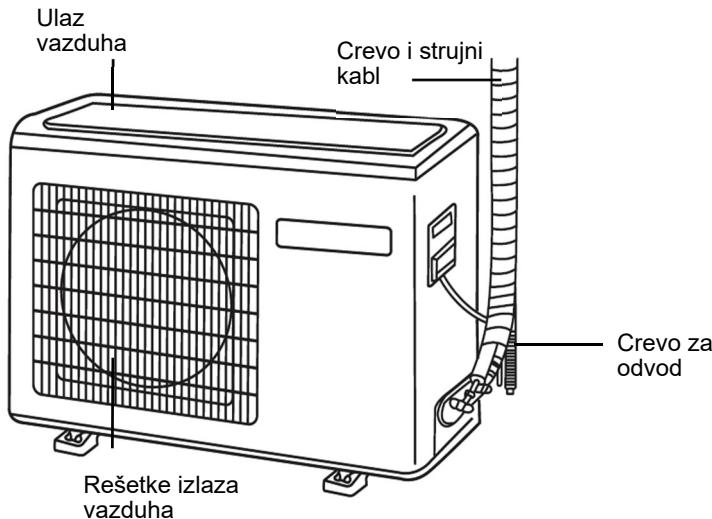

Napomena: Sve slike u ovom uputstvu samo su šematski prikazi. Mrežni utikač, WI-FI funkcija, funkcija negativnih jona i vertikalno i horizontalno okretanje nisu obavezni. Stvarna jedinica ima prednost.

Čišćenje i održavanje

Upozorenje


Pre čišćenja klima uređaja, potrebno ga je ugasiti i isključiti struju na više od 5 minuta. U suprotnom, moguć je rizik od elektrošoka.

Nemojte kvasiti klima uređaj. To može uzrokovati elektrošok. Pobrinite se da ne ispirate aparat vodom ni u kom slučaju. Nestabilne tečnosti kao što su razređivač i benzin oštetiće kućište aparata. Stoga, molimo da kućište čistite mekom, suvom krpom i vlažnom krpom nakvašenom u neutralno sredstvo.

U toku upotrebe, obratite pažnju na redovno čišćenje filtera kako bi sprečili nakupljanje prašine. Ako je okolni vazduh prašnjav, u skladu sa time povećajte učestalost čišćenja. Nakon odstranjuvanja filtera, nemojte dirati pregradu unutrašnje jedinice prstom i nemojte je prisiljavati na pomeranje kako ne bi oštetili cevi.



Očistite ploču

Kada je ploča unurašnje jedinice zaprljana, nežno je očistite krpom, koristeći mlaku vodu ispod temperature od 40°C i nemojte odstranjavati ploču tokom čišćenja.

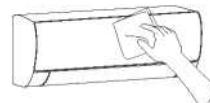

Čišćenje filtera vazduha


■ Odstranite filter vazduha

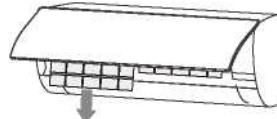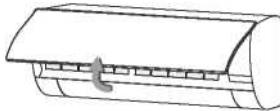

1. Koristite obe ruke kako bi otvorili ploču za ugao s oba kraja ploče u skladu sa smerom strelice.
2. Otpustite filter vazduha iz žleba i odstranite ga.

■ Očistite filter vazduha

Koristite usisivač ili vodu kako bi isprali filter i, ako je vrlo prljav (npr., mastan), očistite ga topлом vodom (ispod 45 °C) i blagim deterdžentom otopljenim u vodi i zatim stavite filter u hlad kako bi se osušio na vazduhu.

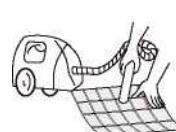

Čišćenje i održavanje

Instalacija filtera

Ponovo instalirajte osušeni filter u obrnutom redosledu od odstranjivanja i zatim vratite i pričvrstite ploču.

Instalacija filtera



Proverite pre upotrebe

1. Proverite jesu li ulazi i izlazi vazduha aparata slobodni.
2. Proverite je li izlaz vode na cevi za ispust blokiran i odmah ga očistite ako jeste.
3. Proverite je li žica za uzemljenje pouzdano uzemljena.
4. Proverite jesu li baterije daljinskog upravljača instalirane i je li njihovo punjenje dovoljno.
5. Proverite postoje li oštećenja na rešetki za instalaciju spoljašnje jedinice i, ako postoje, molimo da kontaktirate naš lokalni servisni centar.

Održavanje nakon upotrebe

1. Isključite izvor energije aparata, isključite glavni strujni prekidač i odstranite baterije iz daljinskog upravljača.
2. Očistite filter i telo aparata.
3. Odstranite prašinu i talog sa spoljašnje jedinice.
4. Proverite postoje li oštećenja na rešetki za instalaciju spoljašnje jedinice i, ako postoje, molimo da kontaktirate naš lokalni servisni centar.

Rešavanje problema

Pažnja

Nemojte samostalno popravljati klima uređaj budući da krivo održavanje može uzrokovati elektrošok, požar ili eksploziju. Molimo da kontaktirate naš ovlašćeni servisni centar i prepustite održavanje profesionalcima i proverite sledeće stvari pre kontaktiranja servisa kako bi uštedeli vreme i novac.

Fenomen

Uređaj za klimatizaciju ne radi

Mogući su nestanci struje.[^] Pričekajte povratak struje.

Strujni utikač može biti labav u utičnici.

— Dobro ubacite utikač.

Moguće je iskakanje osigurača.[^] Zamenite osigurač.

Vreme za pokretanje tek treba da dođe – pričekajte ili otkažite postavku odbrojavanja vremena.

Uređaj za klimatizaciju ne može da se pokrene odmah nakon gašenja.

Ako je uređaj uključen odmah nakon gašenja, prekidač za odloženo paljenje odložiće rad za 3 do 5 minuta.

Klima uređaj prestaje s radom nakon što se pokrene

Moguće je dostizanje postavljene temperature – ovo je normalna pojava.

Moguća je postavka stanja odmrzavanja – ona će se automatski vratiti i ponovno raditi nakon odmrzavanja.

Moguće je da je postavljeno odbrojavanje gašenja – ako nastavite s upotrebom, ponovno uključite aparat.

Vazduh duva, ali hlađenje/grejanje nije efektivno.

- Zvuk ventilatora ili releja kompresora koji se pali ili gasi.
- Kada se odmrzavanje pokrene ili zaustavi, doći će do ovog zvuka.
 - Ovo je uzrokovano tokom rashladnog sredstva u obrnutom smeru. Ovo nisu kvarovi.
- Previše akumulacije prašine u filteru vazduha unutrašnjeg aparata može rezultovati fluktuacijom zvuka.
 - Očistite filtre vazduha.
- Previše buke pre paljenja „Snažnog izduva“.
 - Ovo je normalno. Ako Vam je ovaj zvuk neugodan, molimo da isključite funkciju „Snažnog izduva“.

Unutrašnja jedinica ima čudan miris

Postoji zvuk tekuće vode tokom rada uređaja

Pri pokretanju ili gašenju čuje se blagi klik.

Prekomerna akumulacija prašine na filteru, na ulazu i izlazu vazduha, prekomerno malen ugao na krilcima – to sve utiče na učinak hlađenja i grejanja — molimo da očistite filtere, odstranite prepreke na ulazu i izlazu vazduha i regulišite ugao krilaca. Slabo hlađenje ili grejanje uzrokovano otvaranjem vrata i prozora i nezatvorenim ventilatorom ventilacije – molimo da zatvorite vrata, prozore itd. Funkcija pomoćnog grejanja nije dostupna tokom grejanja, a to može dovesti do slabog efekta grejanja.

— Uključite funkciju pomoćnog grejanja (samo za modele s ovom funkcijom).

Postavljanje načina nije ispravno i postavke temperature i brzine izduva nisu primerene.

— Molimo da ponovno odaberete način i postavite primerenu temperaturu i brzinu izduva.

Uređaj nema nepoželjan miris sam po sebi. Ako miris postoji, to može biti zbog nakupljanja mirisa u okolini.

— Očistite vazdušni filter ili aktivirajte funkciju čišćenja.

Kada se uređaj pokrene ili zaustavi ili kada se kompresor pokrene ili zaustavi tokom rada, ponekad je moguć zvuk pištanja tekuće vode. Ovo je zvuk protoka rashladnog sredstva, ne kvar.

Zbog temperturnih promena, ploče i drugi delovi će bubriti i uzrokovati zvuk trenja.

— Ovo je normalno i nije kvar.

Unutrašnja jedinica pravi abnormalne zvukove

Postoje kapljice vode na površini unutrašnje jedinice

- Kada je ambijentalna vlaga visoka, kapljice vode nakupiće se oko izlaza vazduha ili ploče itd.
 - Ovo je normalna fizička pojava.
- Duži rad hlađenja na otvorenom prostoru proizvodi kapljice vode. ^Zatvorite vrata i prozore.
- Premali ugao krilca može rezultirati kapljicama vode na ulazu za vazduh.
 - Povećajte ugao krilaca.

Tokom funkcije hlađenja, unutrašnja jedinica ponekad izduvava maglu

Kada su unutrašnja temperatura i vlažnost visoki, ovo se ponekad dogodi.
^Ovo je uzrokovano brzim hlađenjem unutrašnjeg vazduha. Nakon što aparat radi neko vreme, unutrašnja temperatura i vlaga biće smanjeni i pojaviće se magla.

-  **Odmah stanite sa svim radnjama i isključite dotok električne energije, kontaktirajte naš lokalni Servisni centar u sledećim situacijama.**
-  Ako čujete bilo kakav čudan zvuk ili osetite kakav čudan miris tokom rada.
-  Ako se dogodi abnormalno grejanje strujnog kabla i utičača.
-  Ako se na aparatu ili daljinskom upravljaču nalazi bilo kakva prljavština ili voda.
-  Ako se prekidač za vazduh ili prekidač za zaštitu od curenja često isključuju.

DALJINSKI KLIMA UREĐAJ

UPUTSTVA ZA UPRAVLJANJE



- Pažljivo pročitajte ovo uputstvo, kako biste mogli bezbedno i pravilno koristiti klima uređaj.
- Sačuvajte ovo uputstvo kako biste ga ponovo mogli pročitati.


SADRŽAJ

Opis tipki.....	21
Upotreba	25
Fiksiranje baterije -----	25
Hlađenje/ Grejanje	25
Odvlaživanje.....	26
Podešavanje načina strujanja vazduha -----	26
Smart način rada -----	27
Spavanje -----	27
Pažnja -----	28
Wi-Fi prikaz funkcija -----	29
Evropske smernice za odlaganje	30


Tasteri i funkcije

1. DALJINSKI UPRAVLJAČ

Prednja strana

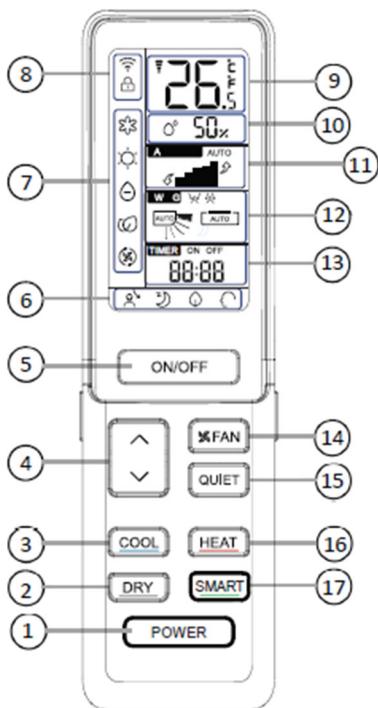

1. DALJINSKI UPRAVLJAČ
Strana ispod prednjeg poklopca

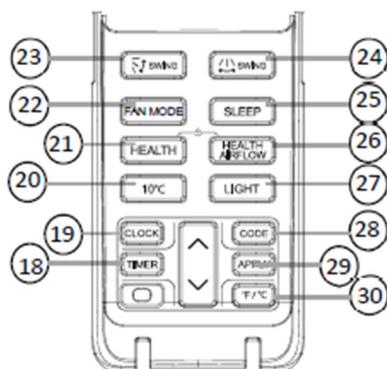

VAŽNO:


AKO MODEL IMA WiFi FUNKCIJU, PRITISNITE I DRŽITE TASTER ZA UKLJUČIVANJE / ISKLJUČIVANJE 5 s KAKO BISTE SE SPOJILI NA WiFi SIGNAL.

Napomena:

Svi pokazatelji sa slike prikazani su radi njihovog jasnog predstavljanja, ali tokom stvarnog rada uređaja se na ekranu prikazuju samo oni pokazatelji koju su u tom trenutku aktivni

Napomena: Izgled tastera temelji se na uobičajenom modelu i može u manjoj meri da se razlikuje od onog kojeg ste naručili, pa će u tom slučaju stvarni oblik biti važeći.

2. DISPLAY PLOČA (prednji panel unutarnje jedinice)

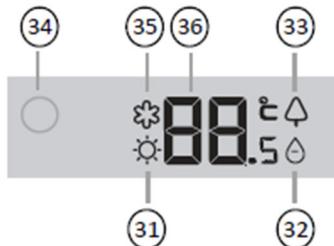

1. POWER taster*

Kada vam je potrebno brzo zagrevanje ili hlađenje, možete da koristite ovu funkciju.

2. DRY taster

Pritisnite DRY taster. U ovoj opciji, kada temperatura vazduha u prostoriji padne ispod temperature koju ste namestili na vašem daljinskom upravljaču ($+2^{\circ}\text{C}$), uređaj će raditi na LOW (niskoj) razini strujanja vazduha.

Postavite željenu temperaturu pritiskom “ \blacktriangle ” ili “ \blacktriangledown ” na daljinskom upravljaču.

3. COOL taster

Pritiskom na COOL taster možete podešavati opcije hlađenja.

Postavite željenu temperaturu pritiskom “ \blacktriangle ” ili “ \blacktriangledown ” na daljinskom upravljaču.

Pritisnite FAN taster kako biste podesili brzinu strujanja vazduha. Možete odabrati Auto/ Low (Nisko)/ Mid (Srednje)/ High (Visoko) strujanje vazduha.

4. TEMP. taster

Pritiskom na TEMP taster podešavate željenu temperaturu.

Postavite željenu temperaturu pritiskom “ \blacktriangle ” ili “ \blacktriangledown ” na daljinskom upravljaču.

5. ON/ OFF taster

Palite ili gasite vaš uređaj pritiskom na ovaj taster.

6. Prikaz pojedinih uključenih funkcija

7. Prikaz načina rada

Prikazuje način rada uređaja.

8. WiFi and LOCK ikona

Prikazuje WiFi i zaključavanje.

9. TEMP. ikona

Prikazuje postavljenu temperaturu.

10. HUMIDITY ikona

Prikazuje funkciju ovlaživanja.

11. FAN SPEED ikona

Prikazuje nivo brzine strujanja vazduha.

12. SWING ikona

Prikazuje položaj usmerivača vazduha.

13. TIMER ikona

Kada je TIMER uključen, to će se prikazati na ekranu.

14. FAN taster

Pritisom na ovaj taster možete podešiti brzinu strujanja vazduha.

Možete izabrati između Auto/ Low (Nisko)/ Mid (Srednje)/ High (Visoko) strujanje vazduha.

15. QUIET taster

Koristite ovaj taster kako biste smanjili buku uređaja. Display će prikazati  ikonu.

Uređaj je automatski na LOW (niskoj) razini strujanja vazduha. Pritisnite ponovo taster kako biste isključili opciju.

16. HEAT taster

Pritisom na HEAT taster možete podešavati opcije grejanja.

Postavite željenu temperaturu pritiskom “▲” ili “▼” na daljinskom upravljaču.

Pritisnite FAN taster kako biste podešili brzinu strujanja vazduha. Možete odabrat Auto/ Low (nisko)/ Mid (srednje) ili High (visoko).

17. SMART taster*

Klima uređaj može prepoznati unutrašnju temperaturu i vlažnosti i prilagodite ga u skladu s tim.

18. TIMER taster**Podešavanje “ON” vremena tajmera:**

- a. Kada je daljinski upravljač isključen, pritisnite “TIMER” taster i ekran će prikazati “TIMER ON”.
- b. Pritisom na “▲” ili “▼” možete podešavati željeno vreme tajmera, a svakim pritiskom na te tastere, željeno vreme će se povećavati ili smanjivati za 1 min. Može se podešiti do najviše 24 h.
- c. Pritisnite APPLY taster kako biste potvrdili odabir.

Postavljanje “OFF (ISKLJ.)” timera:

- a. Kako biste isključili TIMER, pritisnite TIMER nekoliko puta dok ikona ne nestane.

19.CLOCK taster

Postavite vreme koje se pojavljuje na daljinskom upravljaču.

Pritiskom na “▲” ili “▼” možete podešavati željeno vreme a svaki pritisak na tastere menja vreme za 1 minut. Kada ste postavili željeno vreme pritisnite taster APPLY i ikone „AM/PM“ će prestati da trepere na ekranu daljinskog upravljača.

20.10 °C taster

Posebna funkcija postavljanja grejanja; održavanje temperature na 10 ° (značajno za RS).

21.HEALTH taster

Pritiskom na HEALTH taster, klima uređaj pokreće ionizaciju te uklanja bakterije i viruse iz vazduha.

Pritisnite ovaj taster i display će prikazati .

Pritisnite ponovo za isključenje funkcije.

22.FAN SPEED taster

Podrazumevana mala brzina ventilatora, režim ventilatora, podešena temperatura se neće prikazivati, temperatura unutrašnjeg displeja je 24 °C.

23.SWING UP/DOWN taster

Pritiskom na ovaj taster , vertikalni usmerivači vazduha će se pokretati automatski. Zaustavite ga u željenom položaju ponovnim pritiskom na ovaj taster.

24.SWING LEFT/RIGHT taster

Pritiskom na ovaj taster , vertikalni usmerivači vazduha će se pokretati automatski. Zaustavite ga u željenom položaju ponovnim pritiskom na ovaj taster.

25.SLEEP taster*

Pritisnite SLEEP taster i upravljajte opcijama „spavanja“.

*Beleška: za dodatno pročitajte na kraju uputstva

26.HEALTH AIRFLOW taster*

Funkcija zdravog protoka vazduha:

- a) Pritisnite HEALTH AIRFLOW taster za pokretanje funkcije.
- b) Ponovo pritisnite taster kako biste podesili položaj usmerivača vazduha.

*Beleška: za dodatno pročitajte na kraju uputstva

27.LIGHT taster

Podesite osvetljenost i prikaz displeja na unutrašnjoj jedinici uređaja.

28.CODE taster

Pritisnite taster CODE. Kod i B kod trepere, pritisnite „primeni“ u roku od 3 sekunde. Možete odabratи Kod ili B kod prema vašem zahtevu.

Podrazumevana vrednost je Kod.

Ova funkcija se koristi u slučaju da u jednoj sobi postoji više od jednog naizmeničnog napona

29.APPLY taster**30.°F/ °C taster**

Kada je daljinski upravljač u statusu, pritisnite dugme °F / °C, u možete da se prebacujete između stepena Fahrenheita i stepena Celzijusa

31.HEAT ikona

Prikazuje da li je uključena opcija grejanja.

32.DRY ikona

Prikazuje da li je uključena opcija odvlaživanja.

33.HEALTH ikona

Prikazuje da li je uključena opcija zdravlja.

34.SIGNAL receiver hole**35.COOL ikona**

Prikazuje da li je uključena opcija hlađenja.


36.AMBIENT temp. ikona

Prikazuje postavljenu temperaturu.

Upotreba

Postavljanje baterija

- Uklonite poklopac spremnika s daljinskog upravljača, te tako otvorite spremnik za baterije
- Umetnute baterije u spremnik i pritom pazite da umetnete na pravilan način s odgovarajućim krajevima baterija koji odgovaraju oznakama (+) i (-).
- Vratite poklopac spremnika za baterije.

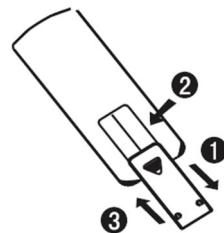

UPOTREBA UREĐAJA

Početak rada

- Pritisnite ON/OFF taster.
- Odaberite mod rada:
COOL: Hlađenje
HEAT: Grejanje
DRY: Ovlaživanje
- Odaberite postavke temperature:
Pritisnite TEMP +/- taster.
- Pritisnite FAN taster.
Možete izabrati **AUTO**, **LOW (Niska)**, **MEDIUM (Srednja)** ili **HIGH (Visoka)** brzinu strujanja vazduha.
U AUTO modu, klima uređaj prilagođava brzinu strujanja vazduha prema temperaturi prostorije.

Hlađenje/ Grejanje

- Pritisnite ON/OFF taster, vaš klima uređaj će započeti sa radom.
- Pritisnite COOL ili HEAT taster, zavisno o potrebama.
- Pritisnite “▲” or “▼” taster, postavite željenu temperaturu. Temperatura može biti postavljena na razliku od 1 °C u rasponu 16 - 32 °C.
- Pritisnite FAN taster kako biste podesili brzinu strujanja vazduha.
Odaberite AUTO, LOW (Nisko), MID (Srednje) ili HIGH (Visoko).

Odvlaživanje

1. Pritisnite ON/OFF taster, vaš klima uređaj će započeti sa radom.
2. Pritisnite DRY taster.
3. Pritisnite “▲” or “▼” taster, postavite željenu temperaturu. Temperatura može biti postavljena na razliku od 1 °C u rasponu 16 - 32 °C.
4. Pritisnite FAN taster kako biste prilagodili brzinu strujanja vazduha.
Odaberite AUTO, LOW (Nisko), MID (Srednje) ili HIGH (Visoko).

Automatsko pomeranje usmerivača vazduha


Možete prilagoditi položaj usmerivača vazduha klima uređaja: Gore/ Dole ili Levo/ Desno

1. Pritisnite SWING taster kako biste upravljali načinom položaja usmerivača vazduha.
2. Možete izabrati COOL(hlađenje)/ DRY (odvlaživanje) ili SMART način rada.
3. Svaki put kada pritisnete SWING taster, daljinski upravljač će na displeju prikazati položaj usmerivača vazduha, zavisno od opcije u kojoj se nalazite:


Gore/ Dole usmerenje vazduha

Pritisnite  taster i možete prilagoditi usmerivače vazduha levo/desno:


Hlađenje način rada (Cool mode)

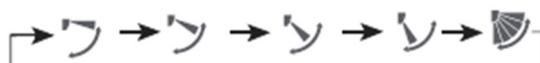

Grejanje način rada (Heat mode)

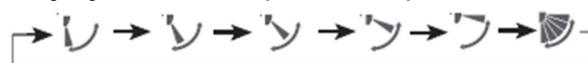

Smart način rada (Smart mode)

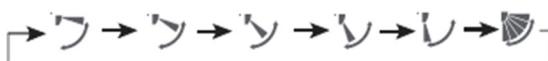

Levo/ Desno usmerenje vazduha

Pritisnite  taster i možete prilagoditi usmerivače vazduha levo/desno:



Smart način rada (opcija)

U načinu hlađenja, grejanja i odvlaživanja pritisnite taster SMART za ulazak u pametnu funkciju.

U načinu pametnog rada, kada klima uređaj radi, uređaj će automatski odabrati način hlađenja, grejanja, odvlaživanja, jer kada je pametna funkcija pokrenuta, pritisnite taster za hlađenje, grejanje ili odvlaživanje da biste prešli na drugi način, izaći ćete iz pametne funkcije.

1. Pritisnite ON/OFF taster, vaš klima uređaj će započeti sa radom.
2. Pritisnite taster SMART  ikona će se prikazati na daljinskom upravljaču.

Note: Uređaj može raditi u različitim SMART načinima:

SMART FRESH/ DEFROST/ FAN SPEED/ FAN HEALTH/ DRY/ SOFT/
CONTROL TEMPERATURE

Način spavanja (Sleep Operation)

Pritisnite taster SLEEP i uređaj će raditi u SLEEP modu.

Hlađenje/ Odvlaživanje :

Jedan sat nakon što postavite SLEEP način rada, temperature će se povećati za 1 °C. Za sat vremena ponovo će porasti za 1 °C. Uređaj će nastaviti sa takvim načinom rada sledećih 6 sati a potom će stati.

Grejanje:

Jedan sat nakon što postavite SLEEP način rada, temperatura će postati 2 °C niža od trenutno postavljene. Nakon sat vremena, ponovo za 2 °C niža. Nakon 3 sata, temperatura će porasti za 1 °C.

Smart način:


Uređaj će raditi u odgovarajućem „Sleep“ načinu rada i prilagođiće se uslovima u kojima se nalazi (temperatura, itd.).

Pažnja

1. Usmerite daljinski upravljač prema prijemniku na klima uređaju.
2. Daljinski upravljač treba da bude na udaljenosti od 8 metara od prijemnika.
3. Nema prepreka između daljinskog upravljača i prijemnika.
4. Nemojte uništiti ili bacati daljinski upravljač.
5. Ne stavljamte daljinski upravljač pod snažne sunčeve zrake ili objekte za grejanje i druge izvore grejanja.
6. Koristite dve AAA baterije,
7. Izvadite baterije iz daljinskog upravljača pre nego što zaustavite njegovo korišćenje.
8. Kada se zvuk odašiljačkog signala ne čuje da se unutrašnja jedinica ili simbol prenosa na ekranu ne prikazuje, baterije se moraju zameniti.
9. Ako se pojavi reset pojava pritiskom na dugme daljinskog upravljača, baterija se potrošila i nove baterije moraju biti zamenjene.
10. Otpadnu bateriju treba pravilno odložiti.

Wi-Fi prikaz funkcija

Dijagram sistemske mreže

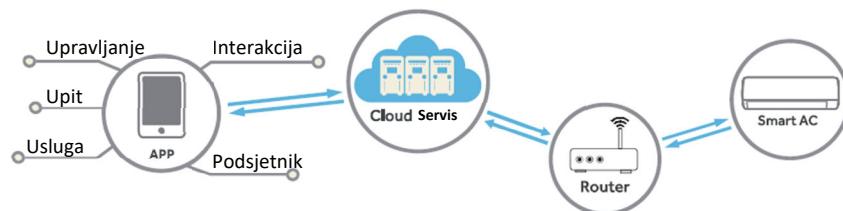

Uslovi rada

Bežični ruter mora biti u mogućnosti da se poveže na Internet.
Za pametni mobilni telefon potreban je iOS ili Android sistem:



iOS sustav
9.0 ili noviji



Android sustav
5.0 ili noviji

Metod konfiguracije

Skenirajte QR kod u nastavku da biste preuzeли aplikaciju „Intelligent Air“. Drugi načini traženja aplikacije: pretražite „Intelligent App“ aplikaciju na:

- App Store (iOS)
- Google Play (Android)



NAPOMENA

Nakon preuzimanja aplikacije,
registrujte se, povežite klima uređaj i
uživajte koristeći Intelligent Air za
upravljanje uređajem.

Evropske smernice za odlaganje

Da bismo zaštitili našu životnu sredinu i što je moguće potpunije reciklirali korišćene sirovine, od potrošača se traži da vрати neupotrebljivu opremu u sistem javnog sakupljanja električne i elektronske opreme.



Simbol precrte kante označava da se ovaj proizvod mora vratiti na mesto sakupljanja elektronskog otpada da bi se napajao recikliranjem najbolje moguće reciklaže sirovina.

Osiguravanjem ovog proizvoda sprečite moguće negativne efekte na životnu sredinu i zdravlje ljudi, koji bi inače mogli nastati usled nepravilnog odlaganja tog proizvoda. Recikliranjem materijala iz ovog proizvoda pomoći ćete u očuvanju zdrave životne sredine i prirodnih resursa.

Za detaljne informacije o prikupljanju EE proizvoda obratite se M SAN Grupi dd ili distributeru kod kojeg ste kupili proizvod

Ovaj uređaj sadrži rashladno sredstvo i druge potencijalno opasne materijale. Prilikom odlaganja ovog uređaja zakon zahteva posebno prikupljanje i postupanje. Ne bacajte ovaj proizvod kao kućni otpad ili nesortirani komunalni otpad.

Kada odlažete ovaj uređaj, imate sledeće mogućnosti:

- Uređaj odložite u namensko komunalno komunalno postrojenje za sakupljanje otpada.
- Kada kupujete novi uređaj, prodavac će besplatno vratiti stari uređaj.
- Proizvođač će besplatno vratiti stari uređaj.
- Prodajte aparat ovlašćenim prodavcima otpadnog metala.

Posebno obaveštenje

Odlaganje ovog uređaja u šumu ili neko drugo prirodno okruženje ugrožava vaše zdravlje i šteti životnoj sredini. Opasne materije mogu procuriti u podzemnu vodu i ući u prehrambeni lanac.

IZJAVA O USAGLAŠENOSTI

Ovaj uređaj proizveden je i usaglašen sa važećim Evropskim normama i sa svim važećim Direktivama I Regulativama



Za izjavu o usaglašenosti, kontaktujte KimTeh d.o.o., Viline vode bb, Slobodna zona Beograd L12/4, 11000 Beograd.

Telefon: 011 20 70 600 ,

Fax: 011 2070 854 , 011 3313 596, E-mail: prodaja@kimtec.rs



ACP-12CH35REWI R32
ACP-18CH50REWI R32

EN

User manual
Air conditioning



Rohs



CONTENTS

Operation and maintenance

Warning	3
Safety Precautions	4
Notices for use	10
Names of each part	12
Clean and care	13
Troubleshooting	15

Note: All the pictures in this manual are just schematic diagrams,
the actual is the standard.

Warning

Warning: This air-conditioner uses R32 flammable refrigerant.

Notes: Air-conditioner with R32 refrigerant, if roughly treated, may cause serious harm to the human body or surrounding things.

- * The room space for the installation, use, repair, and storage of this air-conditioner should be greater than 5m'.
- * Air-conditioner refrigerant can not charge more than 1.7kg.
- * Do not use any methods to speed up defrost or to clean frosty parts except for particular recommended by manufacturer.
- * Not pierce or burn air conditioner, and check the refrigerant pipeline whether be damaged.
- * The air conditioner should be stored in a room without lasting fire source, for example, open flame, burning gas appliance, working electric heater and so on.
- * Notice that the refrigerant may be tasteless.
- * The storage of air conditioner should be able to prevent mechanical damage caused by accident.
- * Maintenance or repair of air conditioners using R32 refrigerant must be carried out after security check to minimize risk of incidents.
- * Air conditioner must be installed with stop valve cover.
- * Please read the instruction carefully before installing, using and maintaining.

Symbol	Note	Explanation
	WARNING	This symbol shows that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire
	CAUTION	This symbol shows that the operation manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.
	CAUTION	This symbol shows that information is available such as the operating manual or installation manual

Safety precautions

Incorrect installation or operation by not following these instructions may cause harm or damage to people, properties, etc.

The seriousness is classified by the following indications:

WARNING 

This symbol indicates the possibility of death or serious injury.

CAUTION 

This symbol indicates the possibility of injury or damage to properties.

WARNING 

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Safety Precautions




The air conditioner must be grounded. Incomplete grounding may result in electric shocks.

Do not connect the earth wire to the gas pipeline, water pipeline, lightning rod, or telephone earth wire.



Always switch off the device and cut the power supply when the unit is not in use for long time so as to ensure safety.

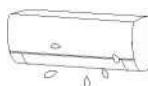

Take care not let the remote control and the indoor unit watered or being too wet.

Otherwise, it may cause short circuit




If the power supply cable is damaged, it must be replaced by the manufacture or its service agent or a similar qualified person.



Don't cut off main power switch during operating or with wet hands.

It may cause electric shock.

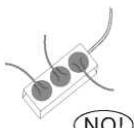

Don't share the socket with other electric appliance.

It may cause electric shock.



Always switch off the device and cut the power supply before performing any maintenance or cleaning.

Otherwise, it may cause electric shock or damage.




Don't pull the power cable.


The damage of pulling power cord will cause serious electric shock.

Pay attention that ducts connected to an appliance shall not contain an ignition source.


Safety Precautions

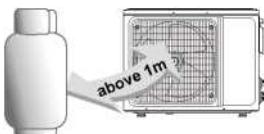


Don't install air conditioner in a place where there is flammable gas or liquid. The distance between them should above 1m. It may cause fire even explosion.

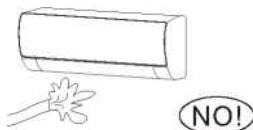


Don't use liquid or corrosive cleaning agent wipe the air conditioner and sprinkle water or other liquid either. Doing this may cause electric shock or damage to the unit.

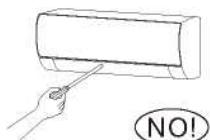


Don't attempt to repair the air conditioner by yourself. Incorrect repairs may cause fire or explosion. Contact a qualified service technician for all service requirement.

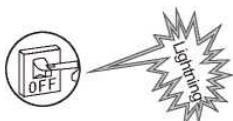


Don't use air conditioner in lightning strom weather. Power supply should be cut in time to prevent the occurrence of danger.

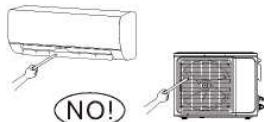

Don't put hands or any objects into the air inlets or outlets. This may cause personal injury or damage to the unit.

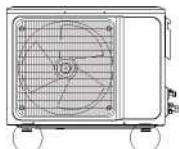

Please note whether the installed stand is firm enough or not. If it is damaged, it may lead to the fall of the unit and cause the injury.

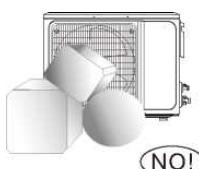

Don't block air inlet or air outlet. Otherwise, the cooling or heating capacity will be weakened, even cause system stop operating



Don't let the air conditioner blow against the heater appliance. Otherwise it will lead to incomplete combustion, thus causing poisoning

The appliance shall be installed in accordance with national wiring regulations.

An earth leakage breaker with rated capacity must be installed to avoid possible electric shocks.

Safety Precautions

This product contains fluorinated greenhouse gases.

Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [675]. This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [675] times higher than 1 kg of CO₂, over a period of 100 years. Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

Ensure no following objects under the indoor unit:

1. microwaves, ovens and other hot objects.
2. computers and other high electrostatic appliances.
3. sockets that plug frequently.


The joints between indoor and outdoor unit shall not be reused, unless after re-flaring the pipe.

The specification of the fuse are printed on the circuit board, such as: 3.15A/250V AC, etc.


Safety Precautions




Don't open the windows and doors for long time when the air conditioner is running.
Otherwise, the cooling or heating capacity will be weakened.

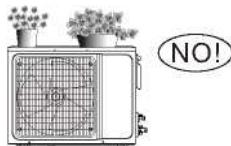


Don't stand on the top of the outdoor unit or place heavy things on it. This could cause personal injuries or damage the unit.

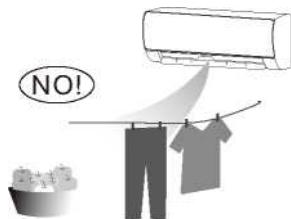

Don't use the air conditioner for other purposes, such as drying clothes, preserving foods, etc.

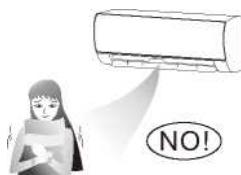

Don't apply the cold air to the body for a long time.
It will deteriorate your physical conditions and cause health problems.

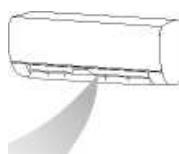

Set the suitable temperature.

It is recommended that the temperature difference between indoor and outdoor temperature should not be too large.

Appropriate adjustments of the setting temperature can prevent the waste of electricity.

If your air conditioner is not fitted with a supply cord and a plug, an anti-explosion all-pole switch must be installed in the fixed wiring and the distance between contacts should be no less than 3.0 mm.

If your air conditioner is permanently connected to the fixed wiring, a anti-explosion residual current device (RCD) having rated residual operating current not exceeding 30 mA should be installed in the fixed wiring.

The power supply circuit should have leakage protector and air switch of which the capacity should be more than 1.5 times of the maximum current.

Regarding the installation of the air conditioners, please refer to the below paragraphs in this manual.

Notices for use

The conditions of unit can't normally run

Within the temperature range provided in following table, the air conditioner may stop running and other anomalies may arise.

Cool	Outside	>43 °C (Applicable for T1)
		>52 °C (Applicable for T3)
	Inside	<18 °C
Heat	Outside	>24 °C
		<-7 °C
	Inside	>27 °C

- * When the temperature is too high, the air conditioner may activate the automatic protection device, so that the air conditioner could be shut down.
- * When the temperature is too low, the heat exchanger of the air conditioner may freeze, leading to water dripping or other malfunction.
- * In long-term cooling or dehumidification with a relative humidity of above 80% (doors and windows are open), there may be water condenses or dripping near the air outlet.
- * T1 and T3 refer to ISO 5151.

Notes for heating

- * The fan of the indoor unit will not start running immediately after the heating is started to avoid blowing out cool air.
- * When it is cold and wet outside, the outdoor unit will develop frost over the heat exchanger which will increased the heating capacity. Then the air conditioner will start defrost function.
- * During defrost, the air conditioner will stop heating for about 5-12 minutes.
- * Vapor may come out from the outdoor unit during defrost. This is not a malfunction, but a result of fast defrost.
- * Heating will resume after defrost is complete.


Notes for turning off

When the air conditioner is turned off, the main controller will automatically decide whether to stop immediately or after running for dozens of seconds with lower frequency and lower air speed.

Notices for use

Emergency operation

- * If the remote controller is lost or broken, use force switch button to operate the air conditioner.
- * If this button is pushed with the unit OFF, the air conditioner will operate in Auto mode.
- * If this button is pushed with the unit ON, the air conditioner will stop running.

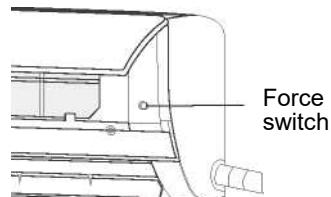


NOTE: Picture is for reference only. The force switch button may be located somewhere near the place like on the picture.

Airflow direction adjustment

1. Use up-down swing and left-right swing buttons on the remote controller to adjust the airflow direction. Refer to the operation manual of the remote controller for detail.
2. For models without left-right swing function, the fins has to be moved manually.


Note: Move the fins before the unit is in operation, or your finger might be injured.

Never place your hand into the air inlet or outlet when the air conditioner is in operation.

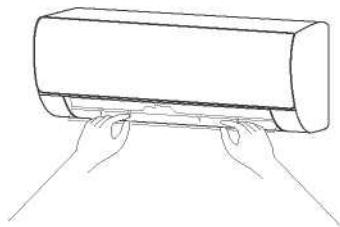


Specific caution

1. Open front panel of the indoor.
2. The connector (as Fig) can not touch the terminal board, and is positioned as shown in Fig.

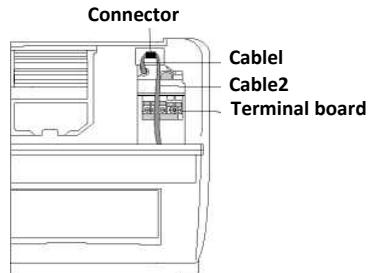


MAIN PARTS

Indoor Unit

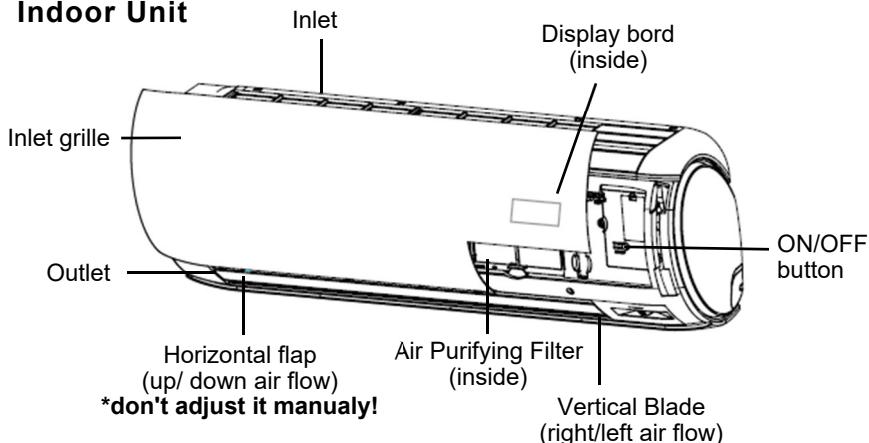

Outdoor Unit

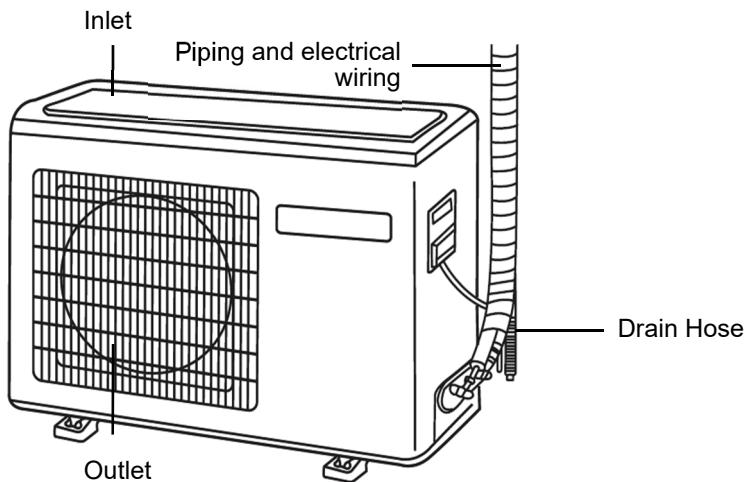

Note: All pictures in this manual are only schematic representations. Mains plug, WI-FI function, negative ion function and vertical and horizontal swivel function are optional. The actual unit takes precedence.

Clean and care

Warning


Before the cleaning of the air conditioner, it must be shut down and the electricity must be cut off for more than 5 minutes, otherwise there might be the risk of electric shocks.

Do not wet the air conditioner, which can cause an electric shock. Make sure not to rinse the air conditioner with water under any circumstances. Volatile liquids such as thinner or gasoline will damage the air conditioner housing, therefore please clean the housing of air conditioner only with soft dry cloth and damp cloth moistened with neutral detergent.

In the course of the using, pay attention to cleaning the filter regularly, to prevent the covering of dust which may affect the effect. If the service environment of the air conditioner is dusty, correspondingly increase the number of times of cleaning. After removing the filter, do not touch the fin part of the indoor unit with the finger, and no force to damage the refrigerant pipeline.



Clean the panel

When the panel of the indoor unit is contaminated, clean it gently with a wrung towel using tepid water below 40 °C, and do not remove the panel while cleaning.

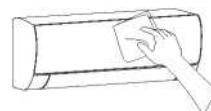

Clean the air filter


■ Remove the air filter

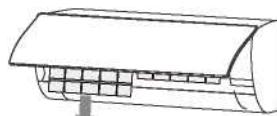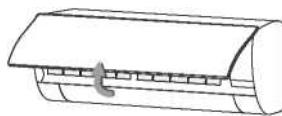

1. Use both hands to open the panel for an angle from both ends of the panel in accordance with the direction of the arrow.
2. Release the air filter from the slot and remove it.

■ Clean the Air Filter

Use a vacuum cleaner or water to rinse filter, and if the filter is very dirty (for example, with greasy dirt), clean it with warm water (below 45 °C) with mild detergent dissolved in, and then put the filter in the shade to dry in the air


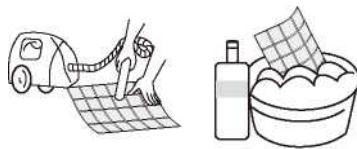


Clean and care

Mount the Filter

Reinstall the dried filter in reverse order of removal, then cover and lock the panel.

Mount the Filter

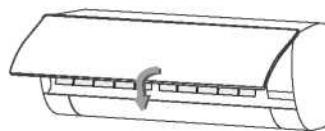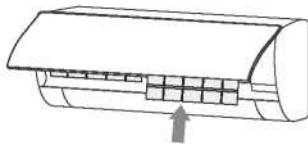

Check before use

1. Check whether all the air inlets and outlets of the units are unblocked.
2. Check whether there is blocking in the water outlet of the drain pipe, and immediately clean it up if any.
3. Check the ground wire is reliably grounded.
4. Check whether the remote controller batteries are installed, and whether the power is sufficient.
5. Check whether there is damage in the mounting bracket of the outdoor unit, and if any, please contact our local service center.

Maintain after use

1. Cut off the power source of the air conditioner, turn off the main power switch and remove the batteries from the remote controller.
2. Clean the filter and the unit body.
3. Remove the dust and debris from the outdoor unit.
4. Check whether there is damage in the mounting bracket of the outdoor unit, and if any, please contact our local service center.

Troubleshooting

Caution

Do not repair the air conditioner by yourself as wrong maintenance may cause electric shock or fire or explode, please contact the authorized service center and let the professionals conduct the maintenance, and checking the following items prior to contacting for maintenance can save your time and money.

Phenomenon

The air conditioner does not work.

There might be power outages. Wait until power is restored

Power plug may be loose out from the socket.

- The plug in the plug tightly.

Power switch fuse may blow.[^] Replace the fuse.

The time for timing boot is yet to come. -Wait or cancel the timer settings.

The air conditioner can't run after the immediate start-up after it is shut down.

If the air conditioner is turned on immediately after it is turned off, the protective delay switch will delay the operation for 3 to 5 minutes

The air conditioner stops running after it starts up for a while

May reach the setting temperature.

— It is a normal function phenomenon.

May be at a defrosting state. — It will automatically restore and run again after defrosting.

Shutdown Timer may be set.

— If you continue to use, please turn it on again.

The indoor unit blows out odor.

Sama klimatska naprava nima neželenega vonja. Če ima vonj, je to lahko posledica kopičenja vonja v okolju.
^ Očistite zračni filter ali aktivirajte funkcijo čiščenja.

The wind blows out, but the cooling/heating effect is not good.

Excessive accumulation of dust on filter, blocking at air inlet and outlet, and the excessively small angle of the louver blades all will affect the cooling and heating effect.

— Please clean the filter, remove the obstacles at the air inlet and outlet and regulate the angle of the louver blades. Poor cooling and heating effect caused by doors and windows opening, and unclosed exhaust fan.

-^Please close the doors, windows, the exhaust fan, etc. Auxiliary heating function is not turned on while heating, which may lead to poor heating effect.

-^Turn on the auxiliary heating function.

(only for models with auxiliary heating function)
Mode setting is incorrect, and the temperature and wind speed settings are not appropriate.

-^Please re-select the mode, and set the appropriate temperature and wind speed.

There is sound of running water during the running of air conditioner.

When the air conditioner is started up or stopped, or the compressor is started up or stopped during the running, sometimes the "hissing" sound of running water can be heard. — This is the sound of the flow of the refrigerant, not a malfunction.

A slight "click" sound is heard at the of start-up or shut-down.

Due to temperature changes, panel and other parts will swell, causing the sound of friction.

— This is normal, not a fault.

There are water drops over the surface of the indoor unit.

- When ambient humidity is high, water drops will be accumulated around the air outlet or the panel, etc.
-This is a normal physics phenomenon.
- Prolonged cooling run in open space produces water drops. ^Close the doors and windows.
- Too small opening angle of the louver blades may also result in water drops at the air inlet.
-Increase the angle of the louver blades.
-

The indoor unit makes abnormal sound.

- The sound of fan or compressor relay switched on or off.
- When the defrosting is started or stop running, it will sound.
 - That is due to the refrigerant flowed to reverse direction. They are not malfunctions.
- Too much dust accumulation in the air filter of the indoor unit may result in fluctuation of the sound.
 - Clean the air filters in time.
- Too much air noise when "Strong wind" is turned on.
 - This is normal, if feeling uncomfortable, please deactivate the "Strong wind" function.

During the cooling operation, the indoor unit outlet sometimes will blow out mist

When the indoor temperature and humidity are high, it happens sometimes.
This is because the indoor air is cooled rapidly.
After it runs for some time, the indoor temperature and humidity will be reduced and the mist will disappear.

-  **Immediately stop all operations and cut off the power supply, contact our Service center locally in following situations.**
-  Hear any harsh sound or smell any awful odor during running.
-  Abnormal heating of power cord and plug occurs.
-  The unit or remote controller has any Impurity or water.
-  Air switch or leakage protection switch Is often disconnected.

AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS



- Read this "instructions" carefully so that you can use the air-conditioner safely and correctly.
- Take good care of the "instructions" so that it can be referred to at any time.


CONTENT

Buttons description	20
Usage	25
Fix batteries -----	25
Cooling/ Heating	25
Drying	26
Swing function	26
Smart Operation Mode	27
Sleep function.....	27
Attention	28
Wi-Fi Function Description	29
Disposal Guidelines.....	30


Buttons description

1. REMOTE CONTROLLER

Front side

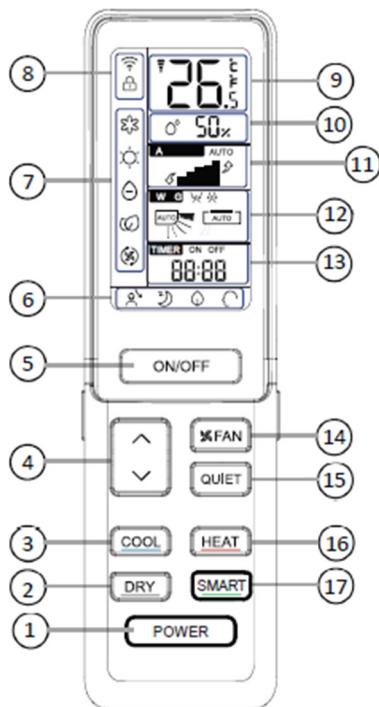

1. REMOTE CONTROLLER Flipped side

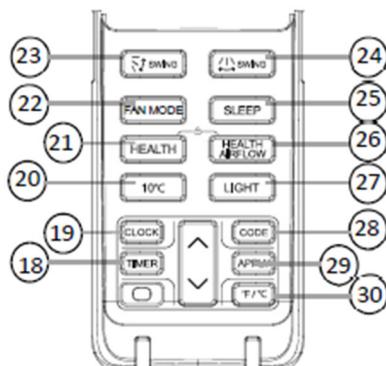

IMPORTANT:


IF THE MODEL HAS WiFi FUNCTION, PRESS ON/OFF BUTTON FOR 5 sec TO EMIT THE WiFi SIGNAL.

Note:

All the figures above are the displays after being initially electrified or re-electrified after power Off.

In actual operations, the remote controller screen displays related items only.

Note: The picture is general remote controller, contains almost all of the function buttons. They may be slightly different from material object (depends on model).

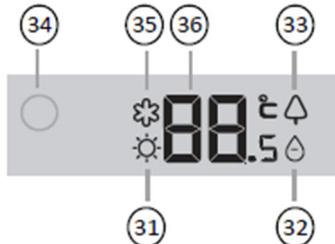2. DISPLAY BOARD (Indoor unit front panel)**1. POWER button**

When you need rapid heating or cooling, you can use this function.

2. DRY button

Press DRY button. In this mode, when room temperature becomes lower than temp. setting (+2 °C), unit will run at LOW speed regardless of FAN setting.

Set the Temp. by pressing “▲” or “▼” buttons.

3. COOL button

By pressing COOL button you choose cooling operation.

Set the Temp. by pressing “▲” or “▼” buttons.

Press FAN button to adjust fan speed. You can choose Auto/ Low/ Mid/ High.

4. TEMP. button

By pressing TEMP button you change temp. settings.

Press “▲” or “▼” to adjust the temperature.

5. ON/ OFF button

You can start or stop the air-conditioner by pressing this button.

6. Display of each function status**7. Operation mode display**

It shows operation mode.

8. WiFi and LOCK display

It shows WiFi Connection and lock.

9. TEMP. display

It shows the set temperature.

10. HUMIDITY display

It shows Humidity function.

11.FAN SPEED display

It shows Fan Speed function.

12.SWING display

It shows Swing function.

13.TIMER display

It shows Timer function.

14.FAN button

By pressing FAN button you control fan speed.

You can choose between Auto/ Low/ Mid/ High fan speed.

15.QUIET button

Use this function when you need silence.

Press QUITE button and display will show  icon.

Fan is automatically in Low Speed. Press again to quit this function.

16.HEAT button

By pressing HEAT button you choose heating operation.

Set the Temp. by pressing “▲” or “▼” buttons.

Press FAN button to adjust fan speed. You can choose Auto/ Low/ Mid/ High.

17. SMART button*

The air conditioning unit can recognize the indoor temperature and humidity, and make the adjustment accordingly.

Press again to quit this function.

*Note: for more read at the end of the instructions

18.TIMER button**Setting the “ON” timer time:**

- a. When remote controller is at off state, press “TIMER” button, the LCD displays “TIMER ON”.
- b. You can press the “▲” or “▼” buttons to adjust the timer time, each touch will be set time to increase or reduce for 1 min. It can be adjusted within 24 h.
- c. Press APPLY button to confirm your setting.

Setting the “OFF” timer time:

- a. To cancel TIMER, pres TIMER button several times until TIMER display disappear.

19.CLOCK button

Set the time that appears on the remote controller.

Press CLOCK button and with “▲” or “▼” buttons you can set time. Each

press will increase or decrease 1min. Once you set the time press APPLY and "AM/PM" icons will stop flashing on the display of remote controller.

20.10 °C button

Special Heating set function 10° heating maintaining (valuable for RS).

21.HEALTH button*

By pressing HEALTH button, the ionizer that emits ions into your space turns on.

Ionized air contributes to a healthier atmosphere, killing viruses and bacteria in your home.

*Note: for more read at the end of the instructions

22.FAN MODE button*

Default low fan speed,fan mode , the setting temperature will no t display, the temperature of indoor display is 24 °C.

*Note: for more read at the end of the instructions

23.SWING UP/ DOWN button*

Press  button, the wind direction vanes can swing automatically, press it again, the wind direction vanes will be stopped.

*Note: for more read at the end of the instructions

24.SWING LEFT/ RIGHT button*

Press  button, the wind direction vanes can swing automatically, press it again, the wind direction vanes will be stopped.

*Note: for more read at the end of the instructions

25.SLEEP button*

Press SLEEP button and you can adjust sleep mode.

*Note: for more read at the end of the instructions

26.HEALTH AIRFLOW button*

Healthy Airflow Operation:

- a) Press HEALTH AIRFLOW button to start and set the work conditions.
- b) Press button again to set the inlet position.

*Note: for more read at the end of the instructions

27.LIGHT button

Control the lightening and appearance of the indoor LED display board.

28.CODE button

Press CODE button. A code and B code twinkle ,press "apply "within 3 seconds .U can choose A code or B code accordindg to your demand .The default value is A code .

This function is used in the scenario that there are more than one AC in one room.

29.APPLY button**30.°F/ °C button**

When the remote controller is on status ,press °F/ °C button, u can shift between degree Fahrenheit and degree Centigrade.

31.HEAT display

Shows if the Heat Function is on.

32.DRY display

Shows if the Dry Function is on.

33.HEALTH display

Shows if the Health Function is on.

34.SIGNAL receiver hole**35.COOL display**

Shows if the Cool display is on.


36.AMBIENT temp. display

When the receiving the remote control signal, display will show the set temperature.

Usage

Fix batteries

1. Slide to open the cover according the direction indicated by arrowhead.
2. Put into two brand new batteries, position the batteries to right electric poles (+ and -).
3. Put back the cover.

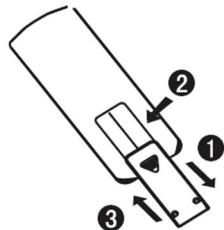

FIRST OPERATION

Base operation

1. Press **ON/OFF** button.
2. Select operation mode:
COOL: Cooling mode
HEAT: Heating mode
DRY: Dehumidify mode
3. Select temp. setting:
Press **TEMP +/-** button.
4. Press **FAN** button:
You can choose between **AUTO**, **LOW**, **MEDIUM** or **HIGH** fan speed.
In **AUTO** mode, air-conditioner adjusts the fan speed according to room temperature.

Cooling/Heating operation mode

1. Press the ON/OFF button and the air-conditioner starts to operate.
2. Press COOL or HEAT button.
3. Press the “**▲**” or “**▼**” button to set the temperature. Temperature will increase or decrease for 1 °C each time you press the buttons.
4. Press the FAN button and you can select fan speed.
You can select fan speed from AUTO, LOW, MEDIUM or HIGH.

Drying operation mode

1. Press the ON/OFF button, the air-conditioner starts to operate.
2. Press the DRY button.
3. Press the “▲” or “▼” button, set the temperature, temperature can be set at 1 °C difference range.
4. Press the FAN button, and you can select fan speed.
You can select fan speed from AUTO, LOW, MEDIUM or HIGH.
5. Press the button again, the air-conditioner stops.

Swing function


You can adjust Up/ Down or Right/ Left swing.

1. Press the SWING button to control wind direction of unit.
2. You can choose COOL/ DRY, HEAT or SMART operation mode.
3. For each press of SWING button, air flow direction on remote controller displays as follows according to different operation modes:

1. Up/ Down Swing Control

Press  button and you can adjust the up/down swing as follows:


Cool mode

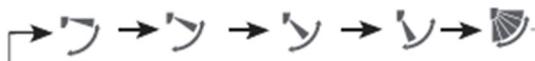

Heat mode




Smart mode

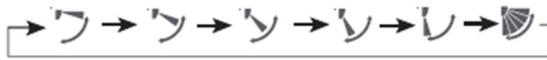

2. Left/ Right Swing Control

Press  button and You can adjust the left/ right swing as follows:

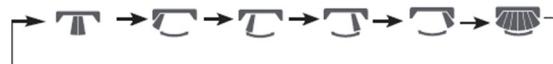

Smart operation mode

Under the cooling, heating and dehumidifying mode, press the SMART key to enter the smart function. Under the smart running mode, when the air conditioning is running, it will automatically select cooling, heating, dehumidifying or blowing mode as When the smart function is running, press the "cooling" "heating" or "dehumidifying" key to switch to the other mode, you will exit from the smart function.

1. Press the ON/OFF button, the air-conditioner starts to operate.
2. Press the SMART button and  icon is displayed on the remote controller.

Note: Unit can work in different SMART modes:

SMART FRESH/ DEFROST/ FAN SPEED/ FAN HEALTH/ DRY/ SOFT/ CONTROL TEMPERATURE

Sleep Operation

Press SLEEP button and unit will operate in SLEEP mode.

Cool/ Dry mode:

One hour after you set SLEEP mode, temp. will become 1 °C higher.

After one hour again for 1 °C higher. The unit will run further for 6 hours and then it stops.

Heat mode:

One hour after you set SLEEP mode, temp. will become 2 °C lower than temp. setting.

After one hour, again for 2 °C lower.

After 3 hours, temp. will rise for 1 °C.

Smart mode:


The unit operates in corresponding sleep mode, which is adapted to the automatically selected operation mode.

Attention

1. Aim the remote controller towards the receiver on the air-conditioner.
2. The remote controller should be within 8 meters away from the receiver.
3. No obstacles between the remote controller and receiver.
4. Do not drop or throw the remote controller.
5. Do not put the remote controller under the forceful sunrays or heating facilities and other heating sources.
6. Use two batteries, do not use the electric batteries.
7. Take the batteries out of remote controller before stop its using for long.
8. When the noise of transmitting signal can't be heard indoor unit or the transmission symbol on the display screen doesn't flare, batteries need be replaced.
9. If reset phenomenon occurs on pressing the button of the remote controller, the electric quantity is deficient and new batteries need to be substituted.
10. The waste battery should be disposed properly.

Wi-Fi Function Description

The system architecture diagram

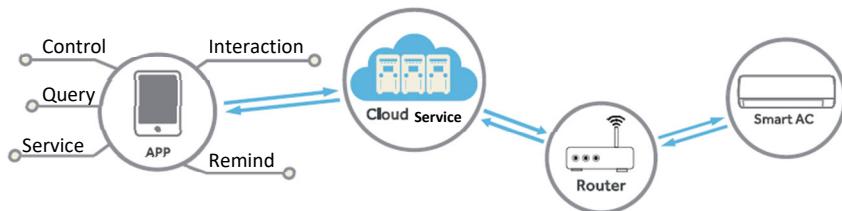

The application environment

Smart mobile phone and wireless router are necessary for the application. Wireless router must be able to connect to the Internet. Smart mobile phone requires iOS or Android system:



iOS system
9.0 or above



Android system
5.0 or above

Configuration method

Scan the QR code below to download "Intelligent Air" APP.
Other Download options: Please search Intelligent Air APP on:

- App Store (IOS)
- Google Play (Android)

NOTE

After App Download, please
register, connect the air-conditioner
and enjoy using Intelligent Air to
manage your device.



European Disposal Guidelines

To protect our environment and to recycle the raw materials used as completely as possible, the consumer is asked to return unserviceable equipment to the public collection system for electrical and electronic.



The symbol of the crossed indicates that this product must be returned to the collection point for electronic waste to feed it by recycling the best possible raw material recycling.

By ensuring this product you will prevent possible negative effects on the environment and human health, which could otherwise be caused due to improper disposal of that product. The recycling of materials from this product, you will help to preserve a healthy environment and natural resources.

For detailed information about the collection of EE products contact M SAN Grupa dd or the dealer where you purchased the product.

This appliance contains refrigerant and other potentially hazardous materials. When disposing of this appliance, the law requires special collection and treatment. Do not dispose of this product as household waste or unsorted municipal waste.

When disposing of this appliance, you have the following options:

- Dispose of the appliance at designated municipal electronic waste collection facility.
- When buying a new appliance, the retailer will take back the old appliance free of charge.
- The manufacturer will take back the old appliance free of charge.
- Sell the appliance to certified scrap metal dealers.

Special notice

Disposing of this appliance in the forest or other natural surroundings endangers your health and is bad for the environment. Hazardous substances may leak into the ground water and enter the food chain.

EU Declaration of Conformity

This device is manufactured in accordance with the applicable European standards and in accordance with all applicable Directives and Regulations.



EU declaration of conformity can be downloaded from the following link: www.msan.hr/dokumentacijaartikala

POŠTOVANI

Zahvaljujemo na kupovini Vivax uređaja i nadamo se da ćete biti zadovoljni izborom. Ako u periodu u kojem imate pravo na reklamaciju bude potreban popravak proizvoda, molim savetujte se sa ovlašćenim prodavačem koji Vam je proizvod prodao ili/ i nas kontaktirajte na dolje navedene brojeve i adrese.

MOLIMO VAS DA PRIJE UPOTREBE PROIZVODA PAŽLJIVO PROČITATE TE HNIČKU DOKUMENTACIJU I UPUTSTVA KOJI SU PRILOŽENI UZ PROIZVOD!

IZJAVA O SAOBRAZNOSTI

VIVAX CG

MODEL UREĐAJA

SERIJSKI BROJ

DATUM PRODAJE

BROJ RAČUNA PRODAVCA

POTPIS I PEČAT PRODAVCA

- Ovom izjavom o saobraznosti proizvođač proizvoda, preko KIM TEC CG d.o.o., kao uvoznika i davaoca prava u Crnoj Gori osigurava besplatan popravak istog u skladu s vazećim propisima i u skladu s uslovima opisanim u ovoj izjavi o saobraznosti.
- Ovom izjavom o saobraznosti ističemo da će predmet ovog prava raditi bez greške uzrokovanе eventualnom lošom izradom i lošim materijalom izrade. Svi eventualno nastali kvarovi biće besplatno otklonjeni u ovlašćenom servisu u predvidjenom roku za reklamaciju.
- USLOVI REKLAMACIJE:** Rok za reklamaciju počinje teći od dana kupovine proizvoda i traje 24 mjeseca. Dodatnih 12 mjeseci važi uz redovan godišnji servis.
- U slučaju kvara na proizvodu koji je predmet reklamacije, obavezujemo se da ćemo isti popraviti u najkraćem mogućem roku, a najkasnije u roku od 15 dana. Ako se proizvod ne može popraviti ili se ne popravi u roku od 15 dana, biće zamijenjen novim .
- Pravo na reklamaciju se priznaje uz fiskalni račun o kupovini, ili uz ovu izjavu o saobraznosti koji mora biti ispravno popunjeno odnosno mora sadržati datum prodaje, pečat i potpis prodavca.
- Davalac izjave o saobraznosti osigurava servis i rezervne djelove 7 godina od datuma kupovine.
- PRAVO NA REKLAMACIJU NE OBUHVATA**
- Redovnu provjeru, održavanje uz zamjenu dijelova koji se troše normalnom upotrebotom. Prilagođavanje ili promjene za poboljšanje proizvoda za primjenu koje nijesu opisane u tehničkim uputstvima za koriscenje, osim ako je za te promjene predočena saglasnost KIM TEC CG d.o.o.
- Pravo na reklamaciju se ne priznaje u sljedećim slučajevima:
Ako kupac ne prilozi ispravan reklamni list ili račun o kupovini.
Ako se kupac nije pridržavao uputstva o koriscenju proizvoda.
Ako je proizvod otvaran, prepriavljan ili popravljан od neovlaštene osobe.
Ako su kvarovi na proizvodu nastali djelovanjem više sile kao što su: udar groma, strujni udar u električnoj mreži elementarne nepogode i slično.
Ako su kvarovi nastali oštećivanjem zbog nepropisane upotrebe ili nepravilnim transportovanjem.
Ako je kvar nastao greškom u sistemu na koji je proizvod priključen.
- Ova Izjava o saobraznosti ne mijenja zakonska potrošačka prava važeća u Crnoj Gori u odnosu na ona koja propisuje proizvođač

Naziv davaoca izjave o saobraznosti: Kim Tec CG d.o.o. Čemovsko polje bb, 81000 Podgorica, Crna Cora

Centralni servis (call centar): Kim Tec CG d.o.o. Čemovsko polje bb, 81000 Podgorica
Tel: 020/608-251,
E-mail za opšte upite: servisi@kimtec-ca.com

DATUM PRIMITKA UREĐAJA NA SERVIS	
DATUM POPRAVKA	
DATUM PRIMITKA UREĐAJA NA SERVIS	
DATUM POPRAVKA	
DATUM PRIMITKA UREĐAJA NA SERVIS	
DATUM POPRAVKA	

Servisni pregled	
Datum:	
Vrijedi do:	
Servisni pregled	
Datum:	
Vrijedi do:	

POPIS SERVISNIH MJESTA

VIVAX

CG

GRAD	SERVISI	ADRESA	BR.TEL:
PODGORICA	D-MK ŠĆEPANOVIĆ doo	Dalmatinska bb	068-501-209; 067-501-209
PODGORICA	KLIMA M doo	Miladina Popovića 155	067-261-535
BAR	FRIGO TIM doo	Bulevar DJ.K.Skenderbega	069-312-312; 030-411-999
BAR	NS ELEKTRONIX doo	Bjeliši bb	069-527-638
BUDVA	NS ELEKTRONIX doo	Bjeliši bb	069-527-638
HERCEG NOVI	MILMONT doo	V Crnogorske brigade br.5	067-584-922
HERCEG NOVI	KOMPRESOR doo	Njegoševa 150	031-323-503
HERCEG NOVI	KOROVLIJEVIĆ doo	Zelenika, Kutri bb	067-606-099
KOTOR	TERMOSTIL doo	Vidikovac bb	067-232-632
NIKSIC	ELEKTROFRIGO doo	Vuka Karadzica br.9	040-247-420
TIVAT	SERVISCOMMERC	Nikole durkovica	032-674-619
ULCINJ	FRIGO TIM doo	Bulevar DJ.K.Skenderbega	069-312-312; 030-411-999